

# Downlight Installation Instructions

## ROBOCAN 2.4G Hz Remote Control version

Applicable model: DLRC28xx90xx6xx (xx: dynamic codes)



**WARNING: RISK OF ELECTRIC SHOCK! TURN OFF POWER BEFORE INSTALLING OR SERVICING.**


### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

**WARNING:**

Product must be installed in accordance with your local electrical regulations and installed by a qualified electrician.



220-240 VAC

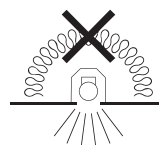

DO NOT COVER  
WITH THERMAL  
INSULATION.




INDOOR  
USE ONLY.



DO NOT TOUCH  
WHILE FIXTURE  
IS IN OPERATION.


### Luminaire Installation

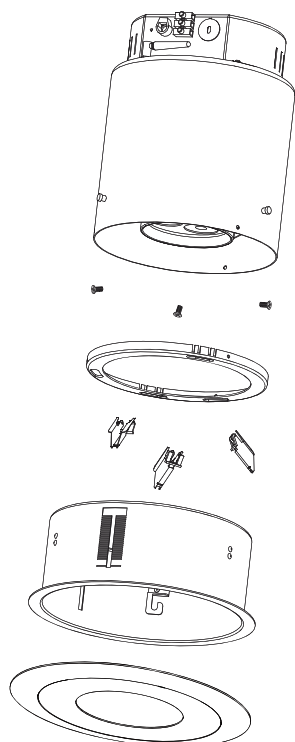


- 1 Lamp x1
- 2 Screw x3
- 3 Front trim x1
- 4 Clip x3
- 5 Embedded housing x1
- 6 Fixed trim x1

# Downlight Installation Instructions


## ROBOCAN 2.4G Hz Remote Control version

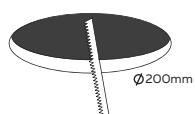


1 Ceiling cutout 200mm.

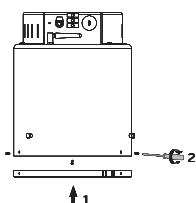

 
2 Assemble the front trim and the lamp using three screws.

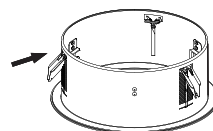


3 Put the clip on the embedded housing.

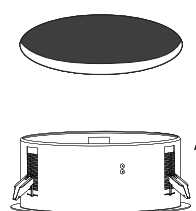 


4 Insert embedded housing into the ceiling cutout.

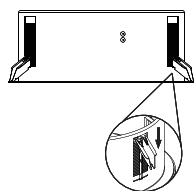


5 Push the clips down against the ceiling.

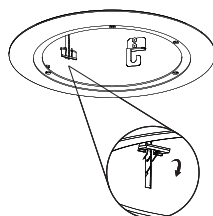


6 Press the snap lock down to fix the lamp in position.

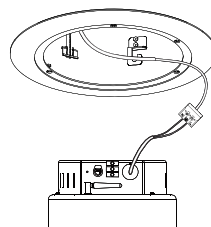


7 Connect the luminaire to the AC power supply.

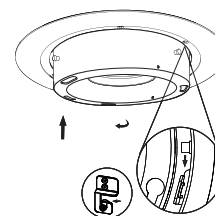


8 Insert the fixture in the embedded housing and twist, making sure the lugs engage fully in the latching slots.

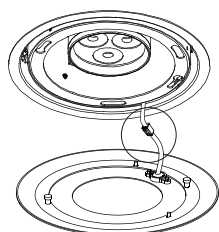

9 Join the fixed trim and the fixture using the connector.

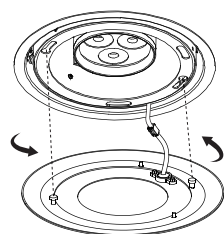

10 Fix the fixed trim onto the fixed trim latch, making sure the lugs engage fully in the latching slots.

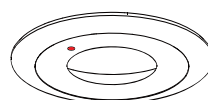

11 Restore power supply.